 
 





## Desiccant Breather Adapters

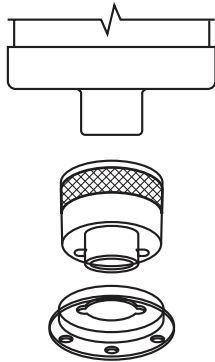

**Bayonet Adapter**

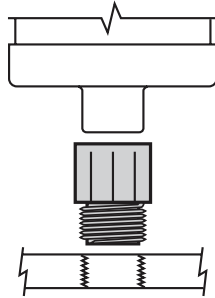

 **Threaded Adapter**

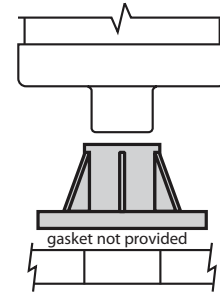


**Flange Adapter**

These adapters are designed to satisfy most applications for breathers installed on new reservoir or “in-the-field” applications. They are re-usable, and do not need to be changed when replacing the **ZEOZORB** breather. These adapters are designed to accommodate reservoirs that currently use breather caps, spin -on filter cartridges, or other breathers.


For any questions regarding the installation of a **ZEOZORB** breather,  
call **1-800-219-1166**




## Desiccant Breather Adapters

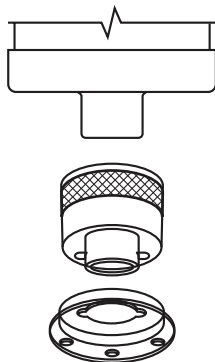

**Bayonet Adapter**

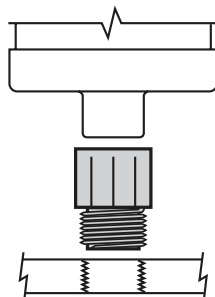

**Threaded Adapter**

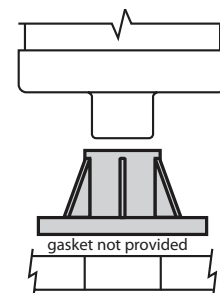

**Flange Adapter**

These adapters are designed to satisfy most applications for breathers installed on new reservoir or “in-the-field” applications. They are re-usable, and do not need to be changed when replacing the **ZEOZORB** breather. These adapters are designed to accommodate reservoirs that currently use breather caps, spin -on filter cartridges, or other breathers.

For any questions regarding the installation of a **ZEOZORB** breather,  
call **1-800-219-1166**



## Disposable Desiccant Breathers

### Installation Procedure:

1. Remove **ZEOZORB** Breather from plastic bag
2. Remove cap from the standpipe at the bottom of the Breather.
3. Mount the Breather on the tank or reservoir using the adapter best suited to the application (See reverse side for available selection of adaptors. Adaptors are re-usable)

**ZEOZORB** Disposable Desiccant Breathers are rated for 14.5 SCFM airflow. This is equivalent of 90 gallons per minute of fluid volume exchange within the reservoir. Other **ZEOZORB** Breathers are available for applications requiring larger airflow capacities.

For any questions regarding the installation of a **ZEOZORB** Breather,  
call **1-800-219-1166**



## Disposable Desiccant Breathers

### Installation Procedure:

1. Remove **ZEOZORB** Breather from plastic bag
2. Remove cap from the standpipe at the bottom of the Breather.
3. Mount the Breather on the tank or reservoir using the adapter best suited to the application (See reverse side for available selection of adaptors. Adaptors are re-usable)

**ZEOZORB** Disposable Desiccant Breathers are rated for 14.5 SCFM airflow. This is equivalent of 90 gallons per minute of fluid volume exchange within the reservoir. Other **ZEOZORB** Breathers are available for applications requiring larger airflow capacities.

For any questions regarding the installation of a **ZEOZORB** Breather,  
call **1-800-219-1166**